

ChromaLuxe® Metal Easel (Unisub Part #4058/4060)


How to properly use the Metal Easel on a ChromaLuxe Aluminum Photo Panel

For use with panels 5"x7" up to 10"x10"



When using it as an easel:

1. Lay the photo panel face-down on a clean surface.
2. Remove the protective film from the adhesive square on the top section of the easel.
3. Line up the bottom of the easel at the bottom-center of the photo panel. Once you have properly aligned it, press the top section firmly.
 - a. **WARNING:** Do not press the taped area of the easel down until proper alignment has been finalized. The adhesive is strong and difficult to remove once set.
4. While holding the panel firmly, bend the bottom section out to a 30-45 degree angle. Your panel is now ready to display.

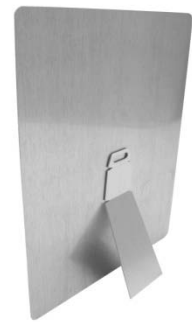

When using it as a wall hanger:

1. Lay the photo panel face-down on a clean surface.
2. Bend the top loop of the easel out at approximately a 45 degree angle.
3. Remove the protective film from the adhesive square on the top section of the easel.
5. Visually align the easel to be near the top or centered (or as close to it as possible). Once you have properly aligned it, press the top section firmly.
 - a. **WARNING:** Do not press the taped area of the easel down until proper alignment has been finalized. The adhesive is strong and difficult to remove once set.
4. While holding the panel firmly, bend the bottom section out to a 15-20 degree angle. Your panel is now ready to display.

