



# Assembling the ChromaLuxe Hanging Mural for Display

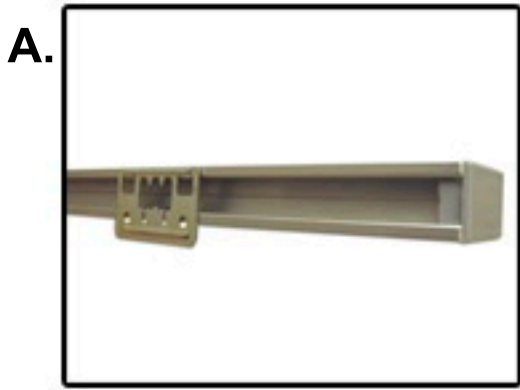

1) Slide the sawtooth hangers into the ends of your hanging bar and space them as evenly as possible (use 2 for the 1' and 2' bars and 3 for the 3' and 4' bars). Once all three have been inserted, press the plastic endcaps into each end of the bar. *For easier application of endcaps, we recommend smoothing the end with a piece of fine-grit sandpaper beforehand.* **(Figure A)**



2) Place three screws or nails in the wall where the mural will hang, preferably with wall anchors for support. Place them as close as possible to the distance you set the sawtooth hangers apart. *Keep in mind that the hangers can slide across the bar, so you can adjust as necessary.* **(Figure B)**

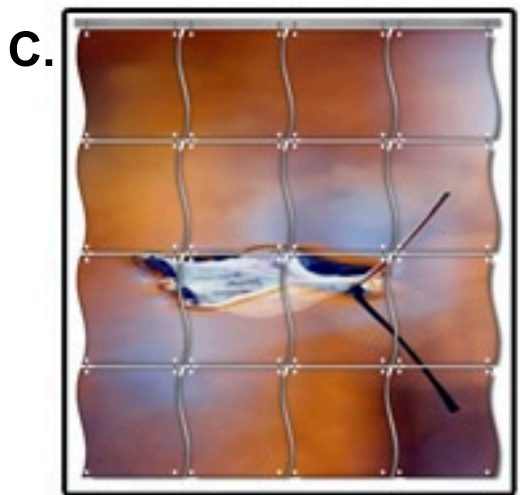

3) Hang the bar on the screws/nails using the sawtooth hangers. Once it is secured, insert the first set of C-links into the holes on the front of the bar. *The C-links can hang either direction, though we recommend hanging them with the open side facing out.*

4) Hang one mural panel from each set of two hooks, making sure that it is facing the proper direction. Add hooks to the bottom of each panel and repeat until your mural is fully complete. **(Figure C)**